

Configuration

```
SYSTEM: SYSTEM NAME           = T5588           > T5588
SYSTEM: EACH MACHINE NAME     = ■■■■           > ■■■■
SYSTEM: AC POWER LINE FREQUENCY (Hz) = 60           > 60
TH:    NUMBER OF TH           = 1                 > 1
TH:    PE CONFIGURATION TH1   SLOT 33 41 97 105      33 41 97 105
      [0:NOT EXIST 1:EXIST]  A1 = 1 1 1 1           > 1 1 1 1
                               E1 = 1 1 1 1           > 1 1 1 1
                               A3 = 1 1 1 1           > 1 1 1 1
                               E3 = 1 1 1 1           > 1 1 1 1
                               A5 = 1 1 1 1           > 1 1 1 1
                               E5 = 1 1 1 1           > 1 1 1 1
                               A7 = 1 1 1 1           > 1 1 1 1
                               E7 = 1 1 1 1           > 1 1 1 1
DP:    PPS CONFIGURATION TH1   = 1-512           > 1-512
DP:    DC CONFIGURATION TH1    = 1-64           > 1-64
DP:    HVPPS CONFIGURATION TH1 = 0             > 0
ALPG:  NUMBER OF ALPG [1, 2]   = 2             > 2
FM:    NUMBER OF FM [0, 2, 4]   = 0             > 0
FM:    NUMBER OF PM [0, 1]      = 0             > 0
FM:    NUMBER OF DBM [0, 1, 2]  = 0             > 0
OPTION: FLASH OPTION [Y/N]      = NO             > NO
OPTION: HIGH SPEED OPTION [Y/N] = YES           > YES
```