

- 1) Pump controller no display (No power)
- 2) Turbo Pump can' t turn on
- 3) Missing cable on the Main panel which supposed to supply 24 Vdc (attached pic, top connector)
- 4) Relay not working.
- 5) PLC can' t check as system not able to function